

STICK


SK022..

SK023..

SK168..

SK168D..


SK168R..

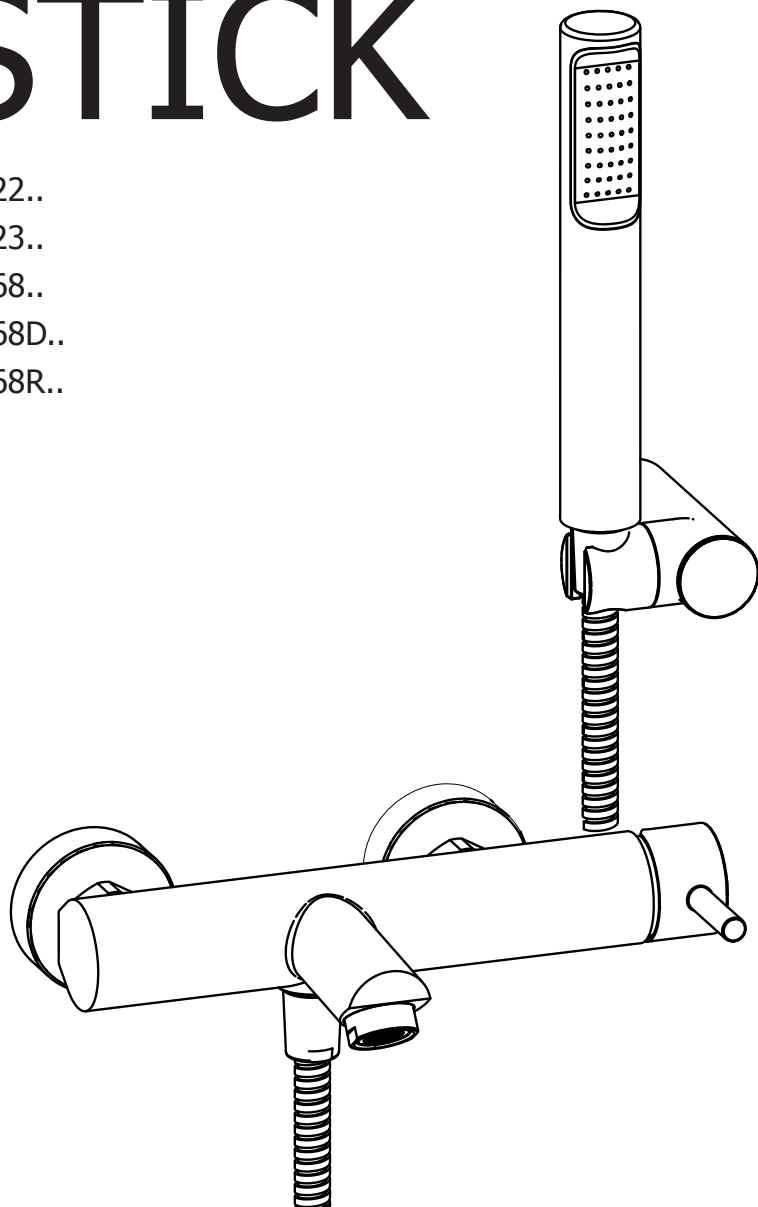

IST061
Rev.2016.00

Montaggio
Assembly


1

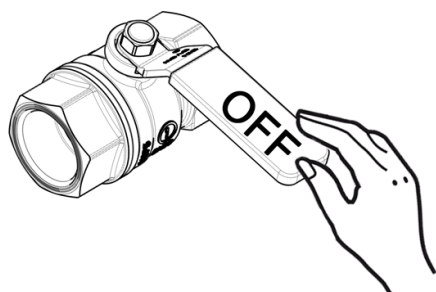

$65 \pm 5^{\circ}\text{C}$



$15 \pm 5^{\circ}\text{C}$

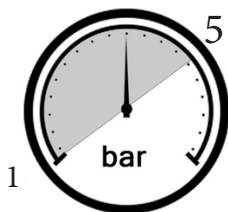

MIN - MAX




OK

2


168
168D 022
169R 023

a

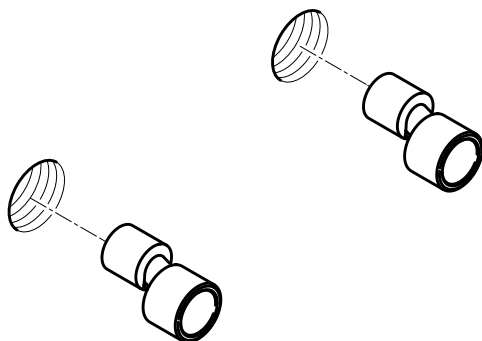

b

CH29






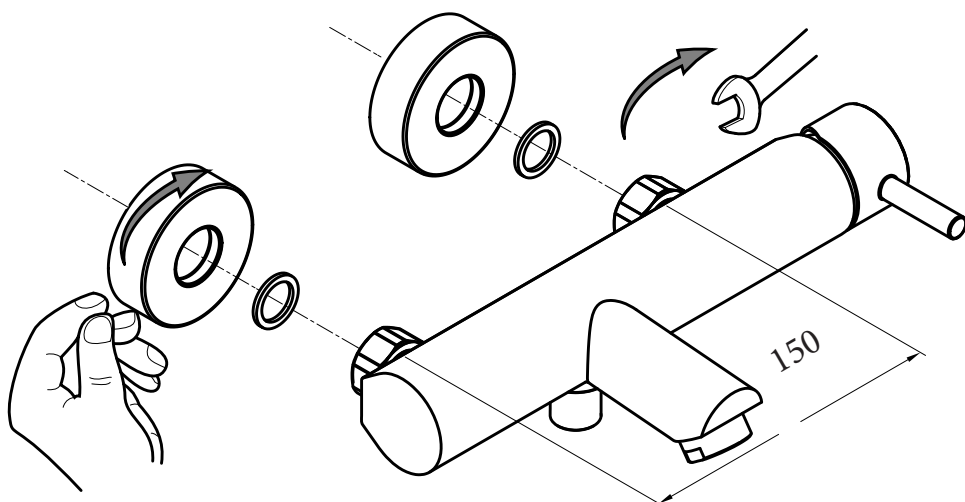



3

168D

023


023
168D

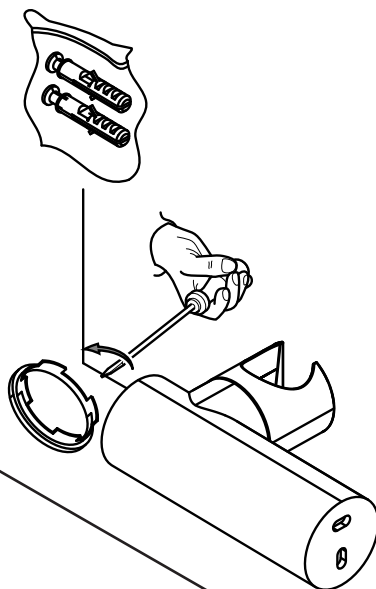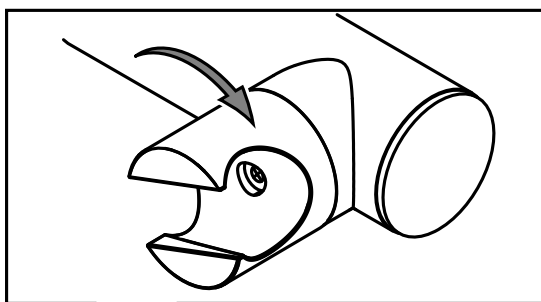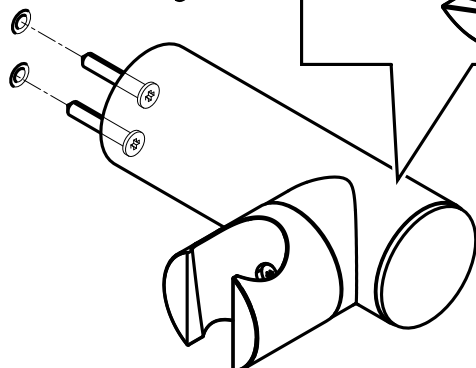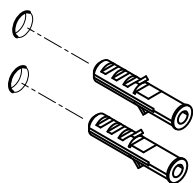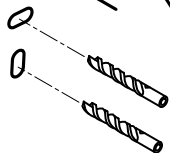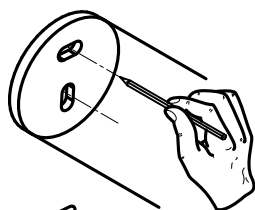

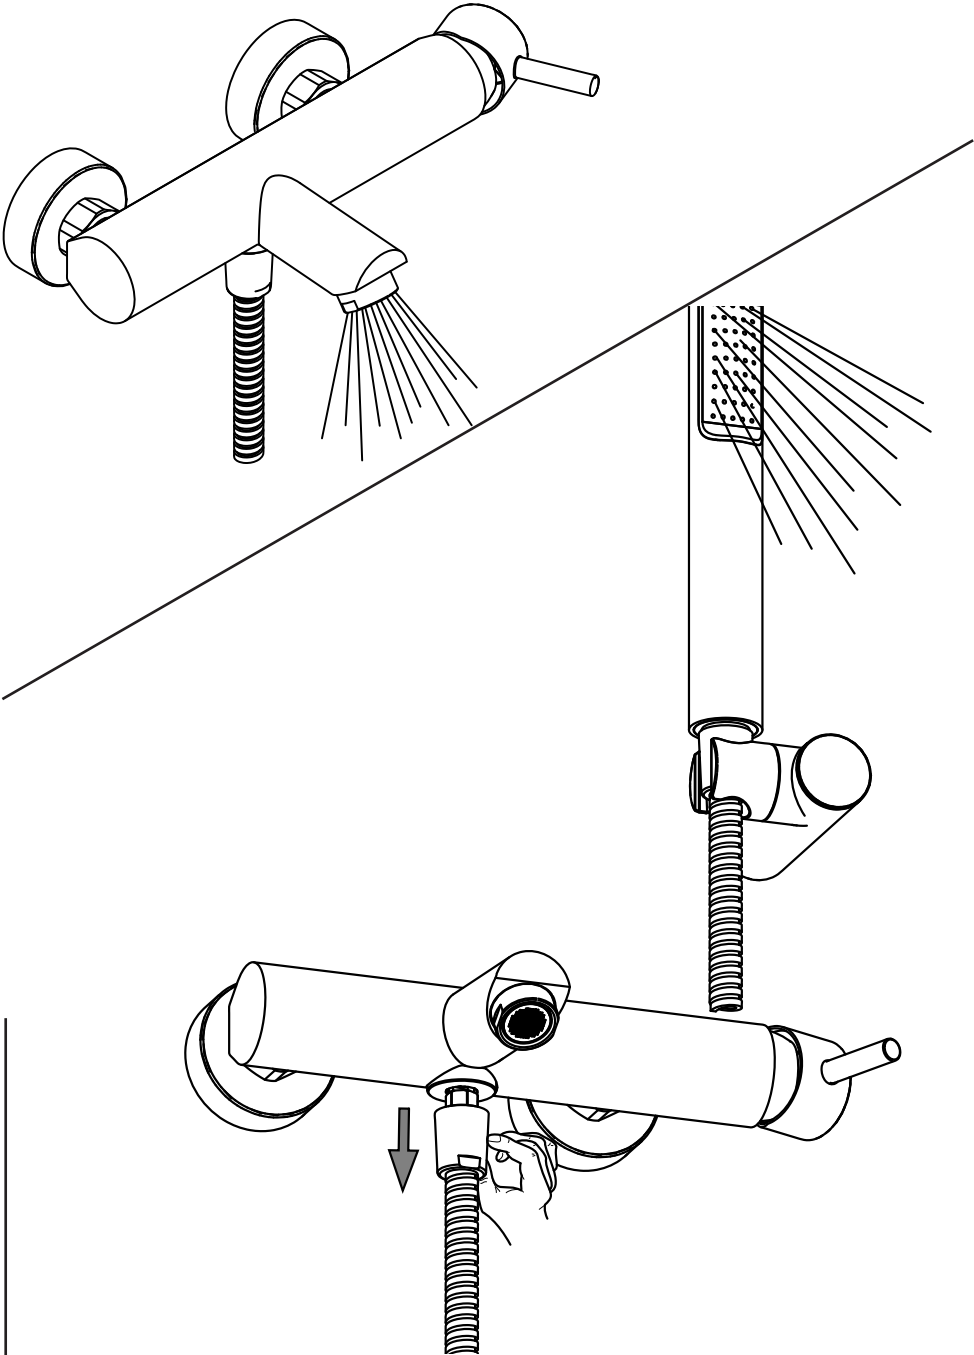







168R

G 3/4"

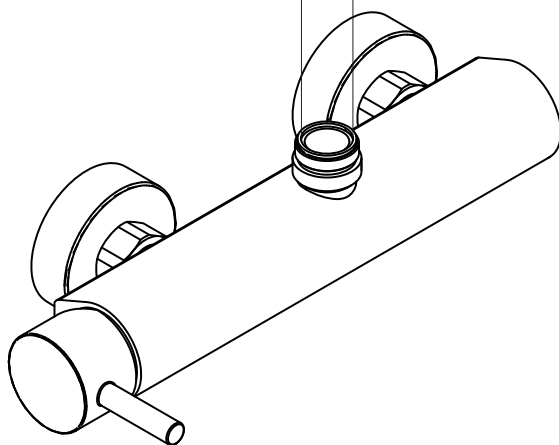

M

Manutenzione
Service

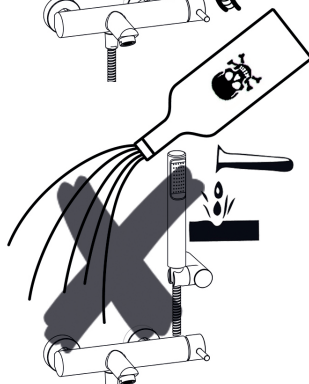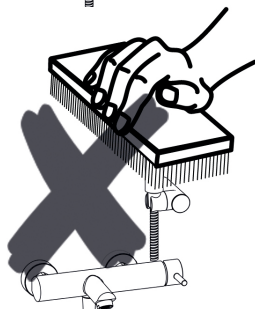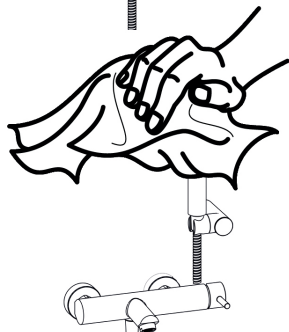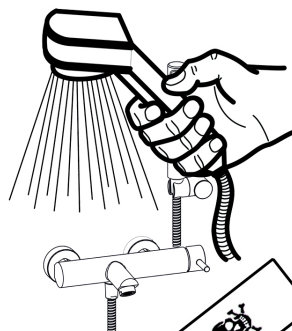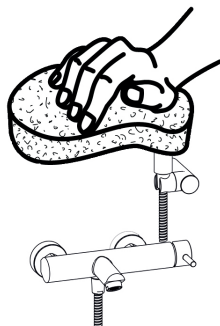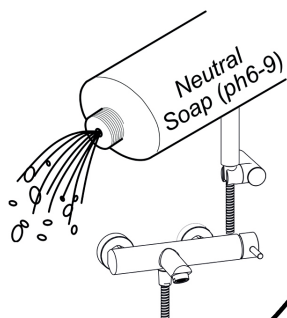




Sostituzione Cartuccia How to replace Cartridge

168 022

168D 023

169R

a

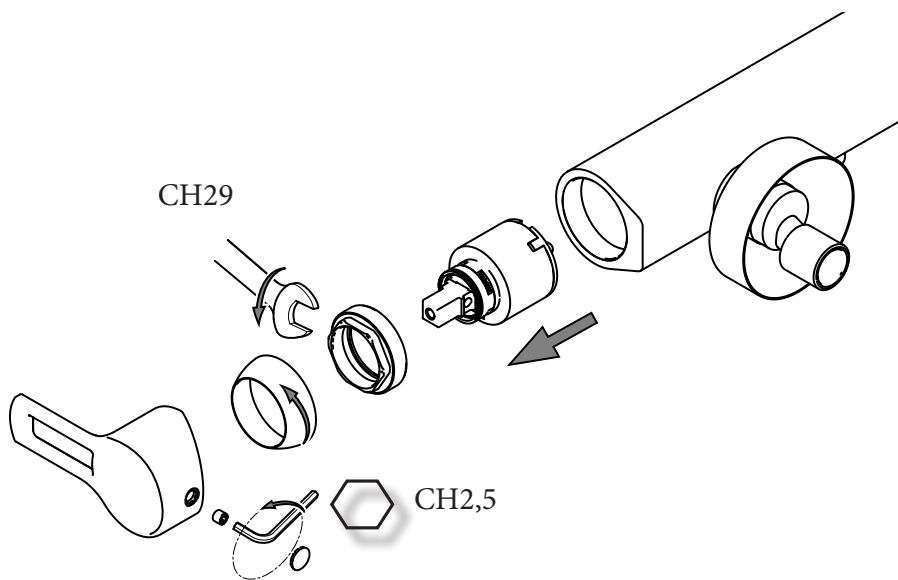


b

Sostituzione Sede Calotta How to replace Seat for Nut

168 022

168D 023


169R

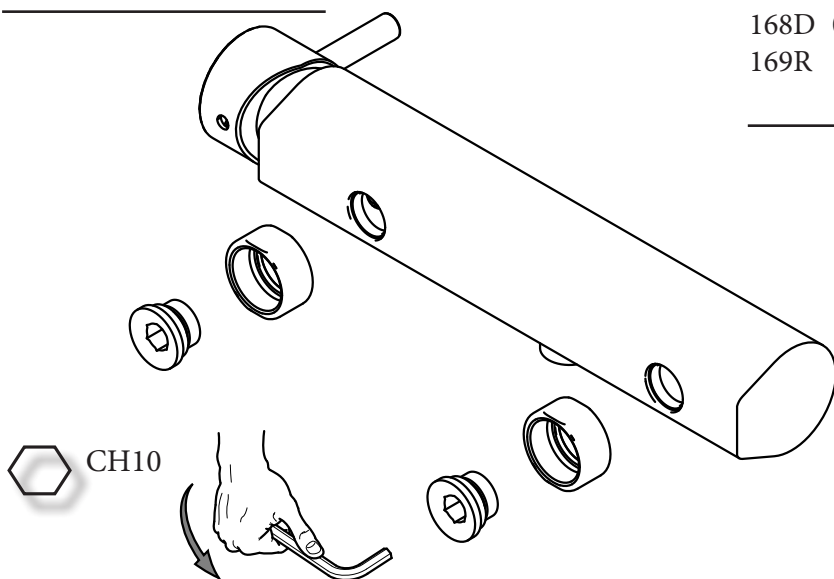

c Sostituzione Deviatore
How to replace Diverter

022


023

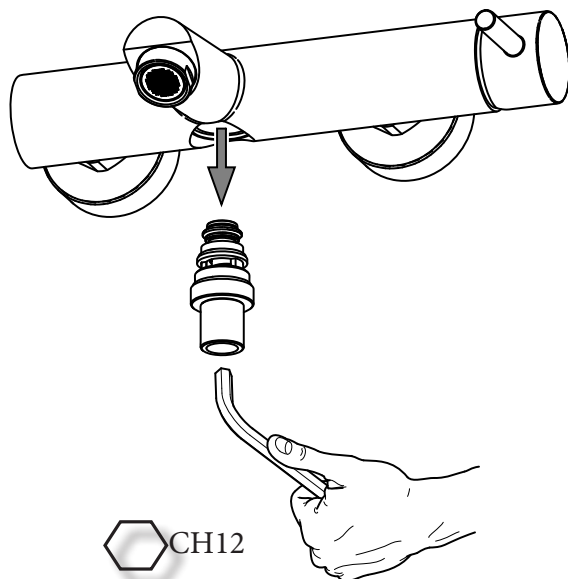

d Sostituzione Aeratore
How to replace Aerator

022

023

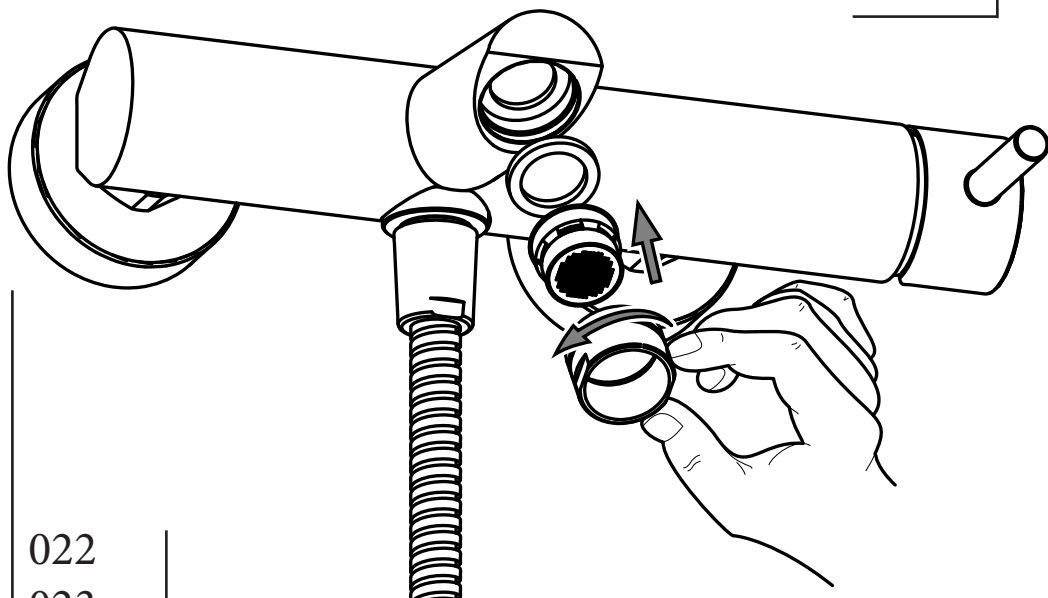

022

023