


# STEEL

STEEL 075 AC  
STEEL 071 AC  
STEEL 081 AC  
STEEL 135 AC  
STEEL 131 AC

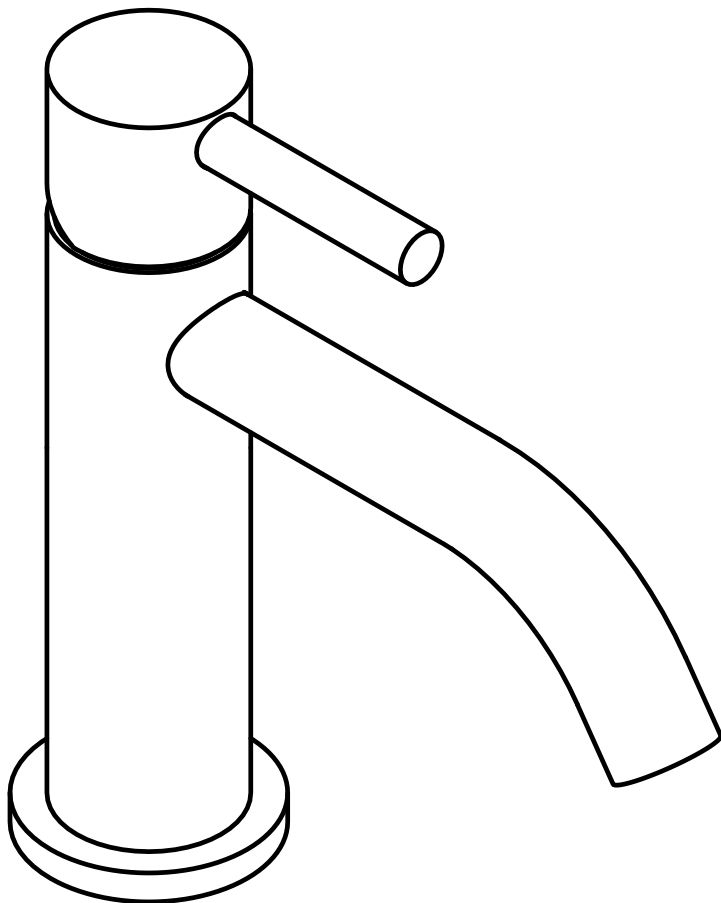

IST033  
Rev.2016.00

# 1

## Montaggio Assembly



$65 \pm 5^{\circ}\text{C}$



$15 \pm 5^{\circ}\text{C}$




MIN - MAX



OK


**2**

**a**

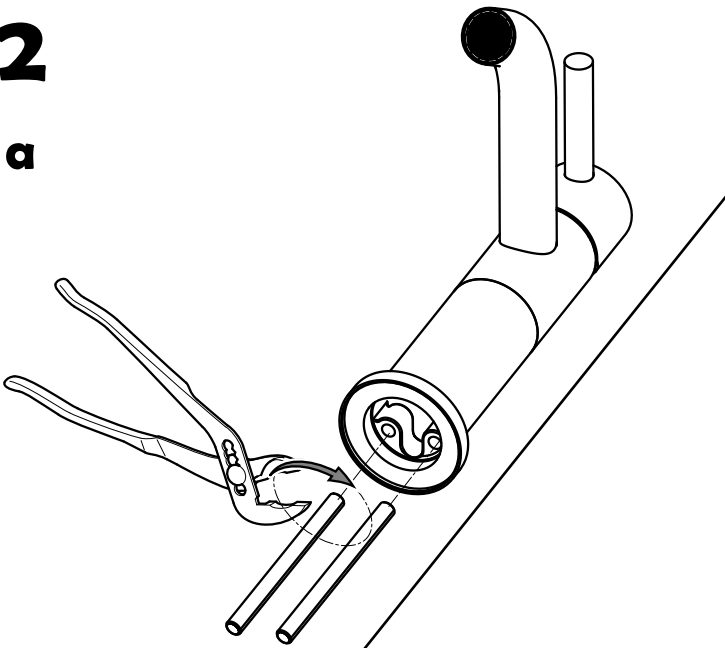


071 075  
081  
131 135

**b**

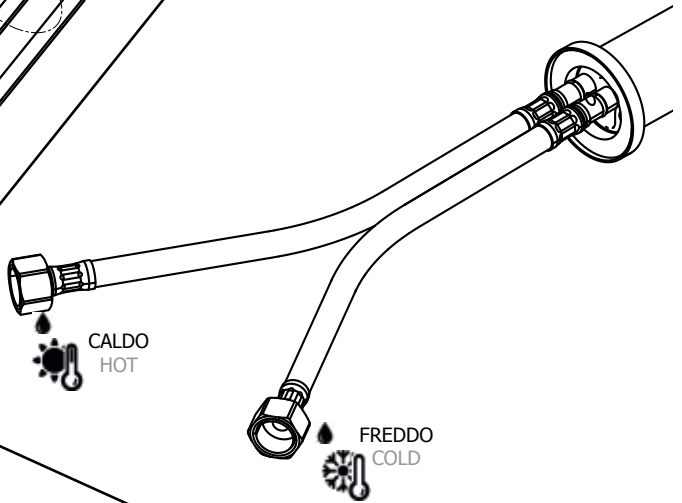


**c**

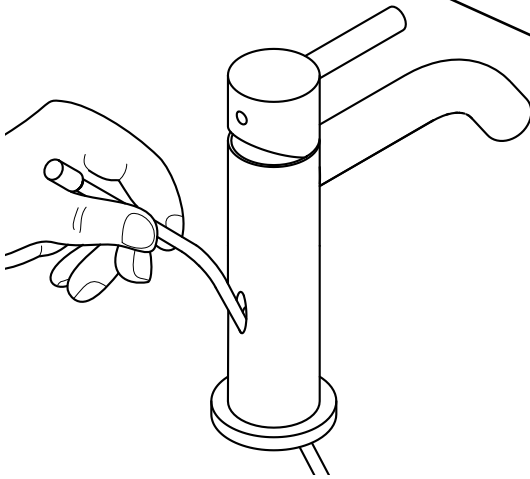


075  
135

**d**

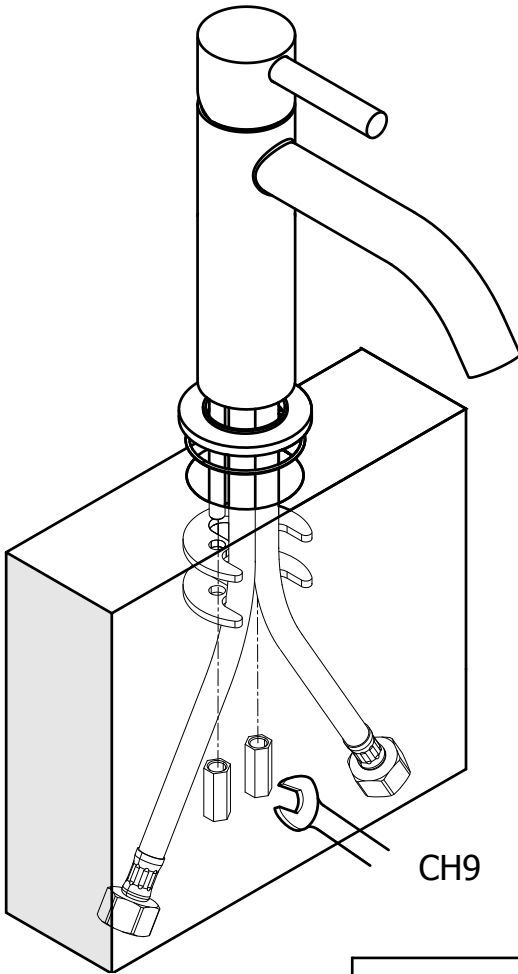


071 075  
081  
131 135

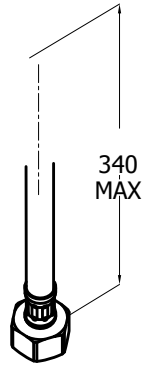

G 3/8"


CH9

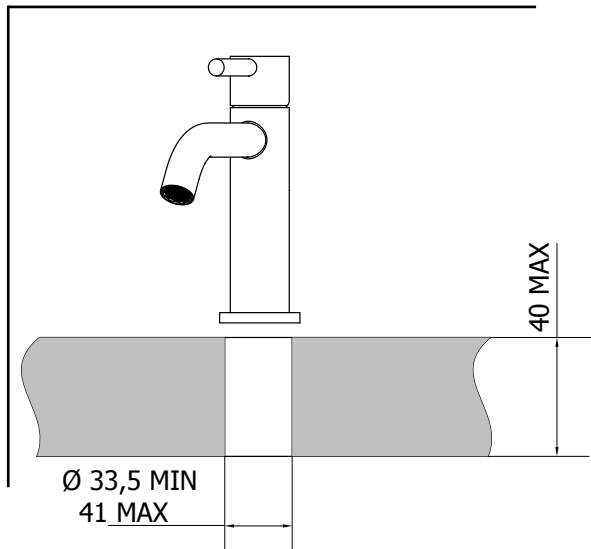


075

135


**e**

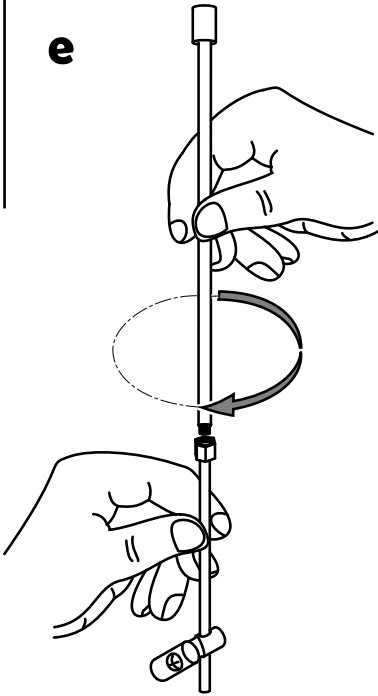


**f**

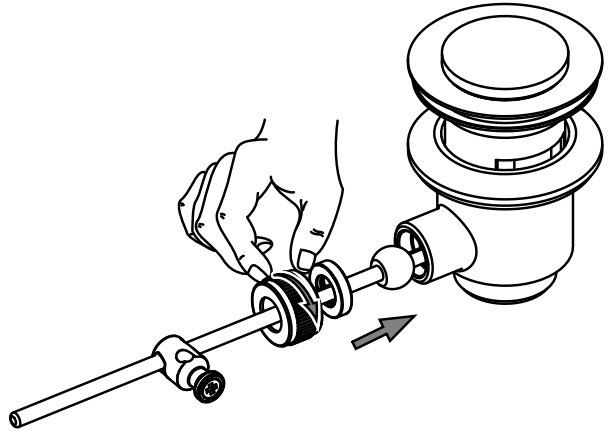

**g**

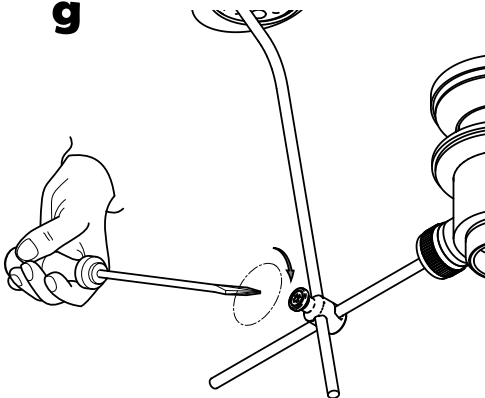





**h**

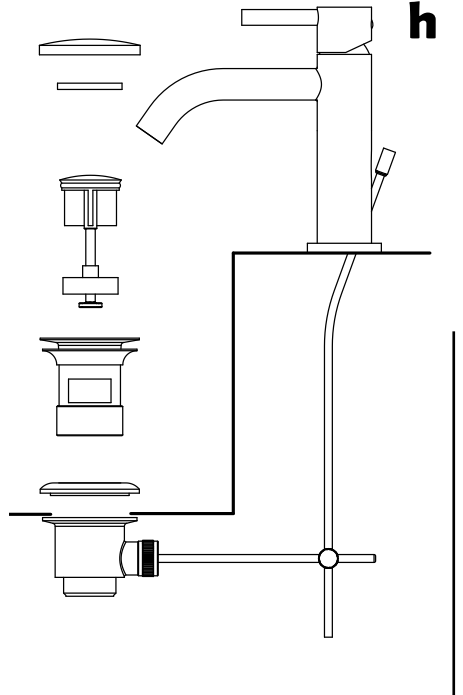

**F**

Funzionamento  
Service

071  
081  
131

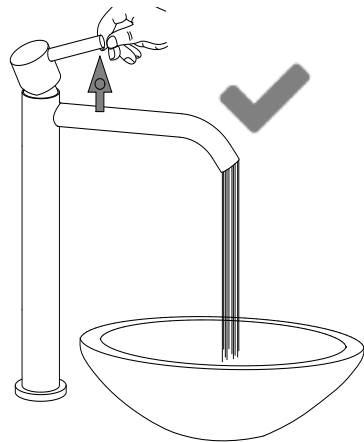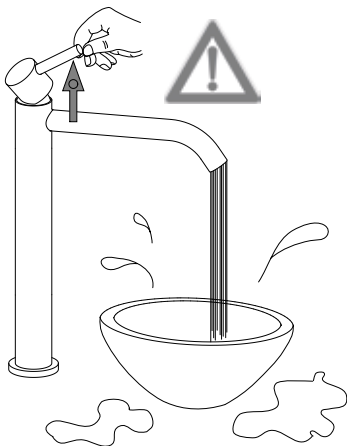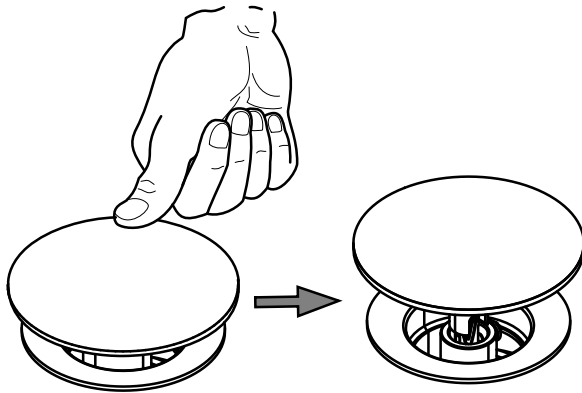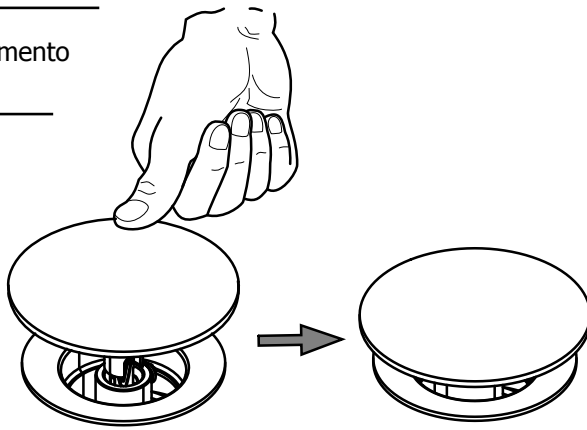

081




# M

Manutenzione  
Service

071 075


081

131 135

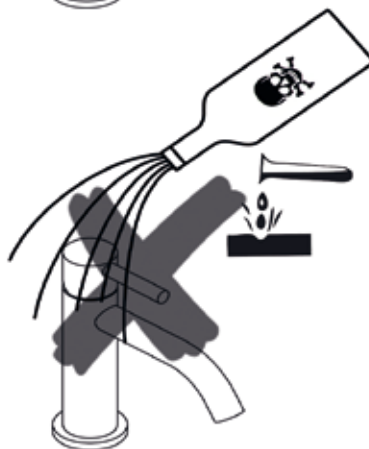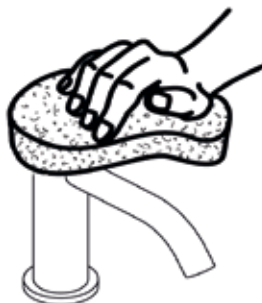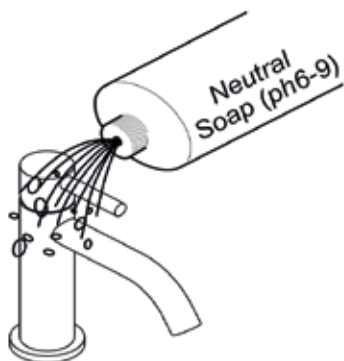


# Sostituzione Cartuccia How to replace Cartridge


**a**

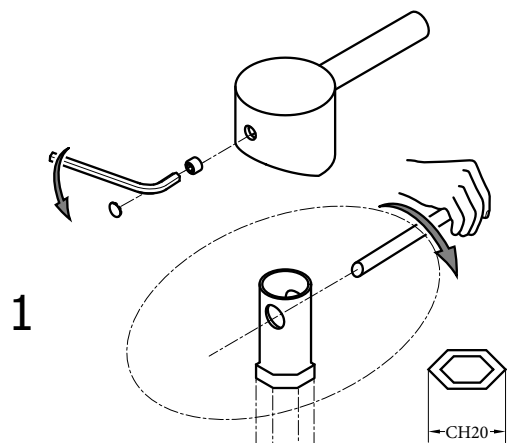

2

 

3

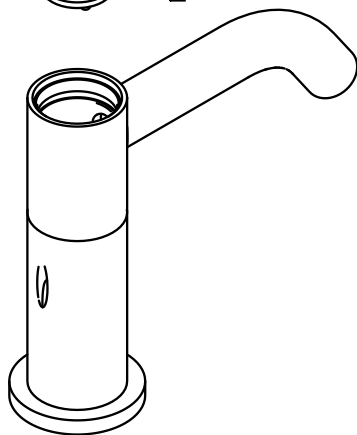


# Sostituzione Aeratore How to replace Aerator

071 075

081

131 135

**b**

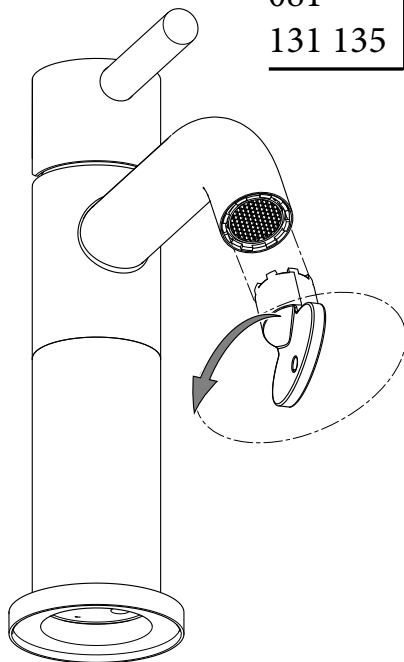

071 075

081

131 135