

JO

JO 003..

JO 004..


JO 008..

JO 052..

JO 053..

JO 119..

 JO 044..

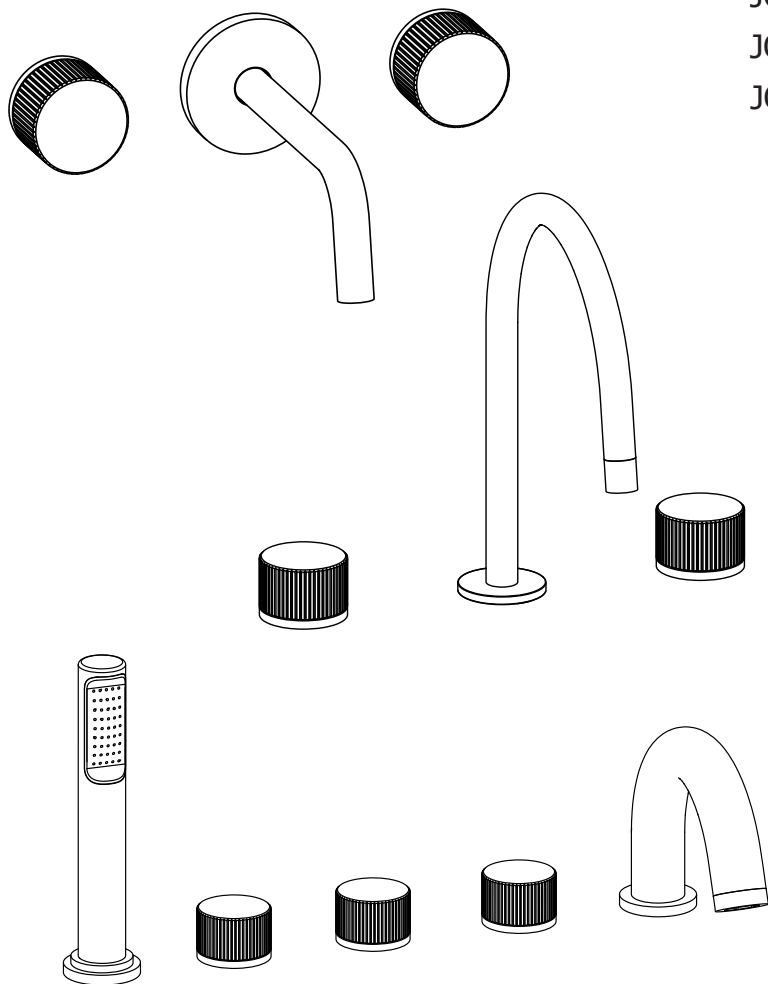


1

Montaggio Assembly



 $65 \pm 5^{\circ}\text{C}$



$15 \pm 5^{\circ}\text{C}$



 
MIN - MAX



OK

2




a

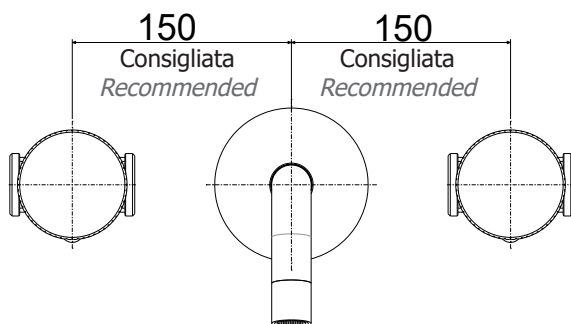

003


004

   008

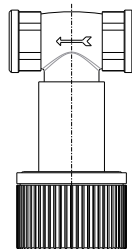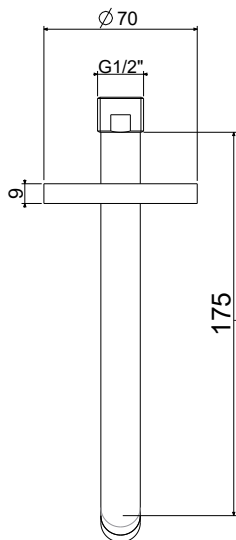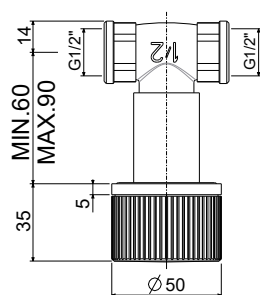



003
175mm

 008
245mm

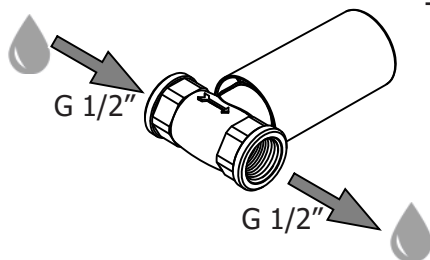
b

003
004
008

  CALDO
HOT


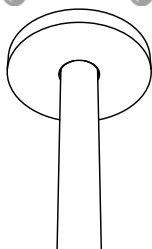
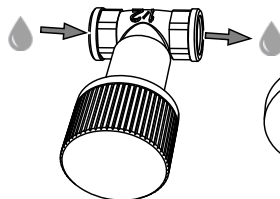


FREDDO
COLD


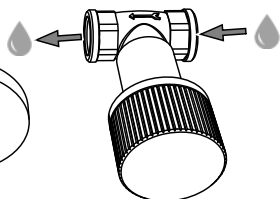 


G 1/2"

   003
008

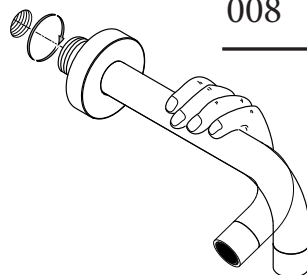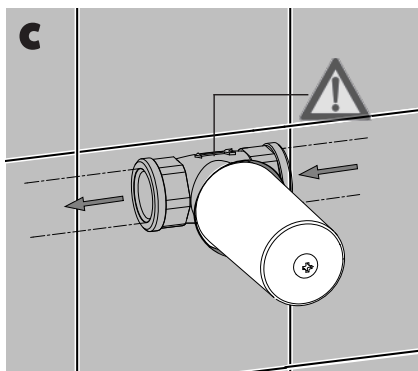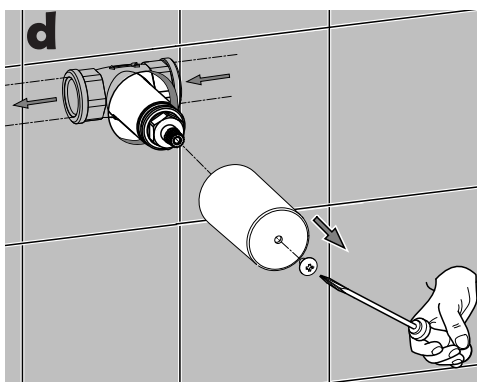
**c****d**

  003
004
008

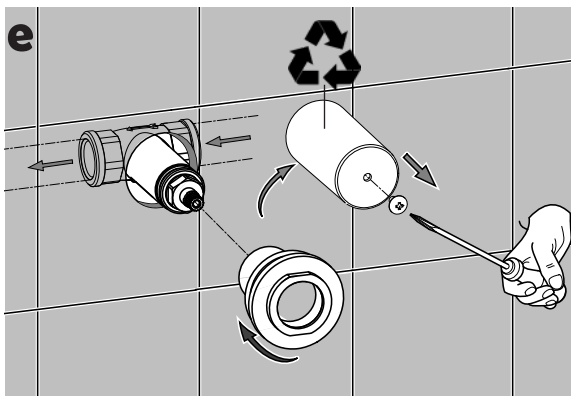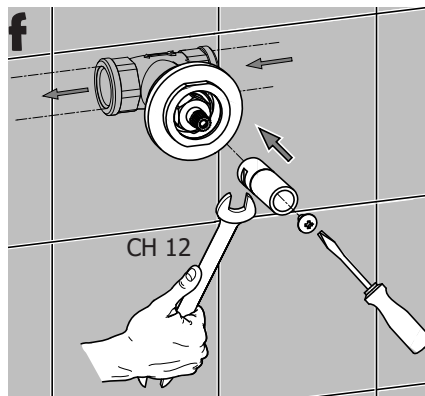
e**f**

g

 
003
004
008

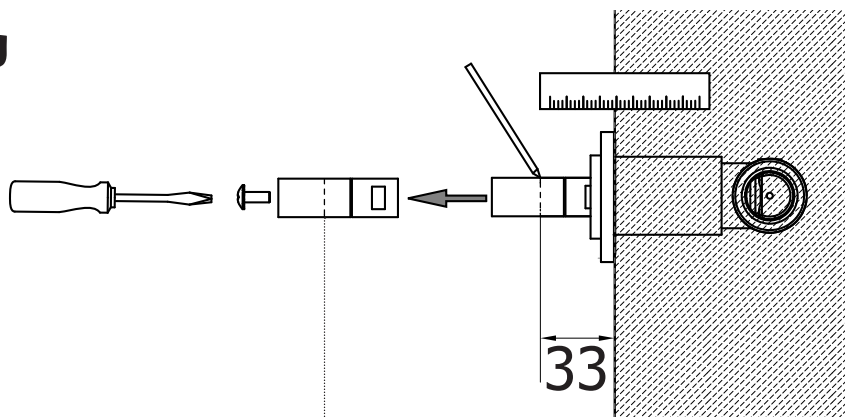


h

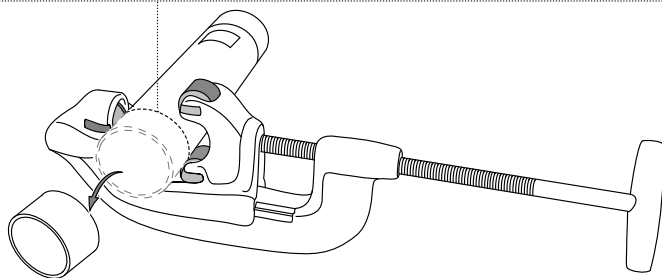 


i

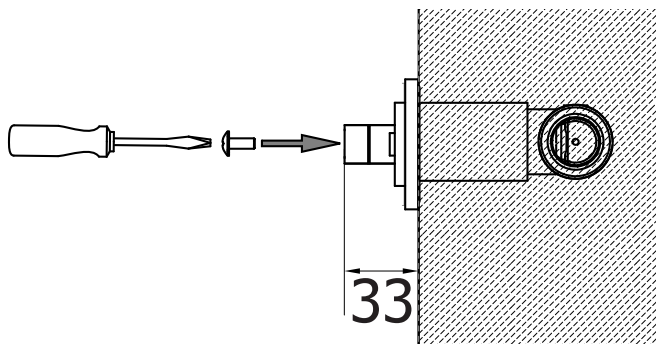 


l

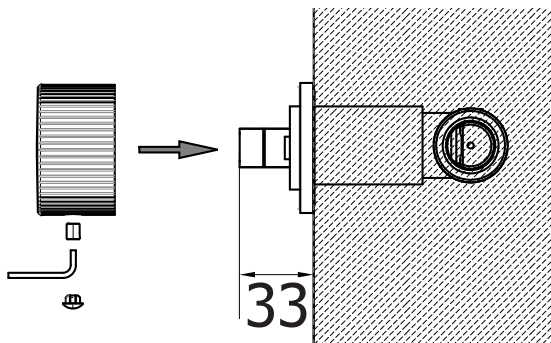 

3

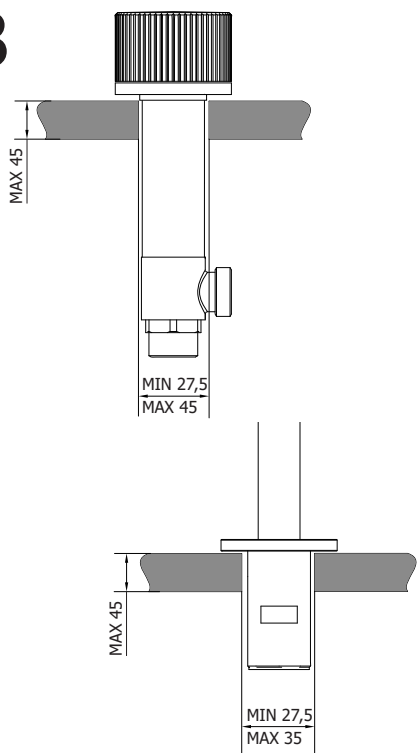 

a

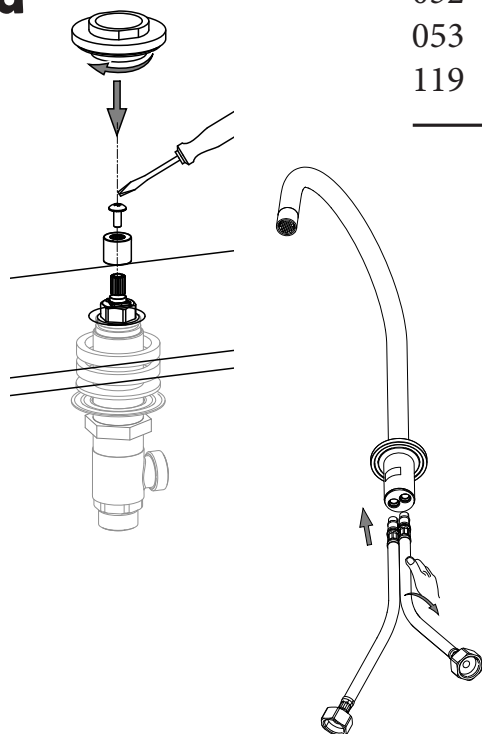 


052


053




119

 
b

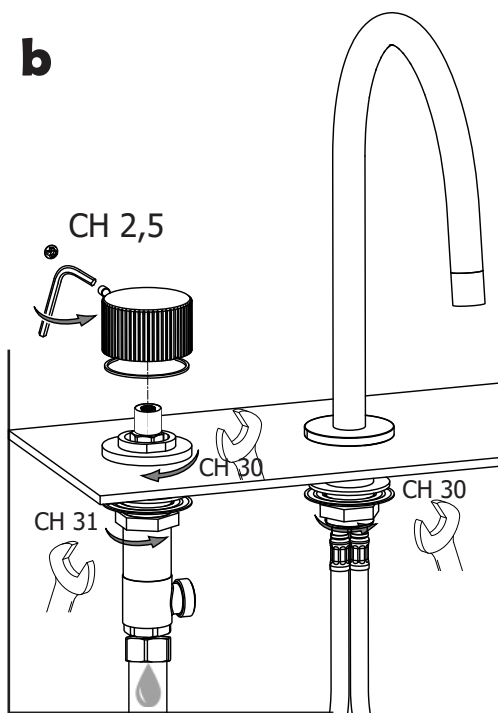

c

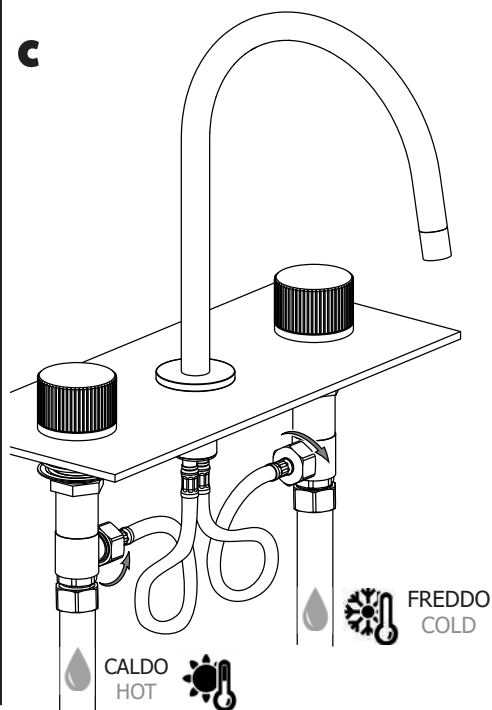 

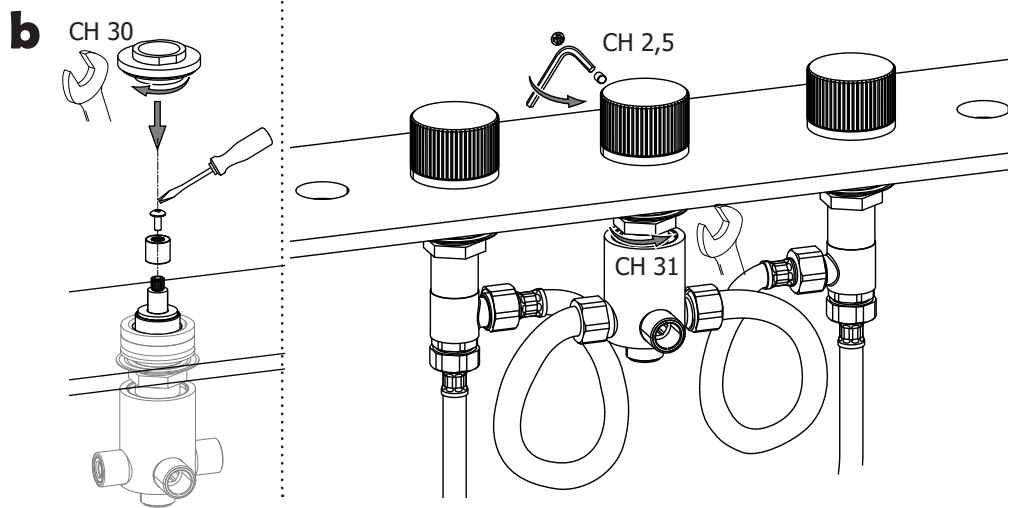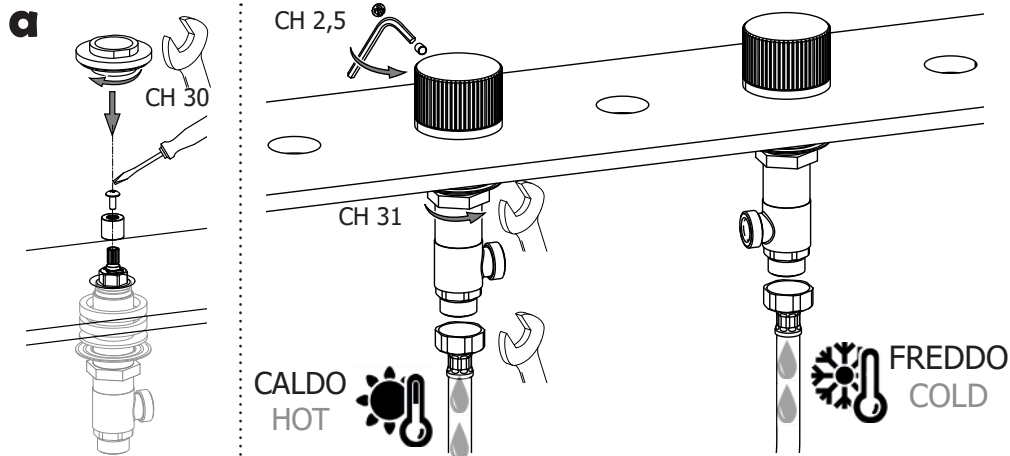  
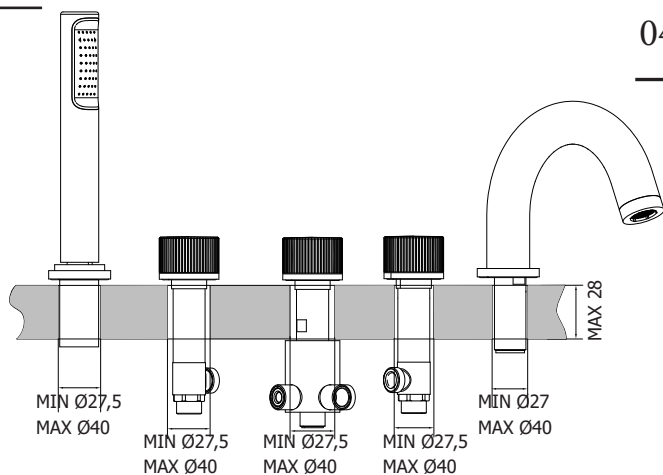 


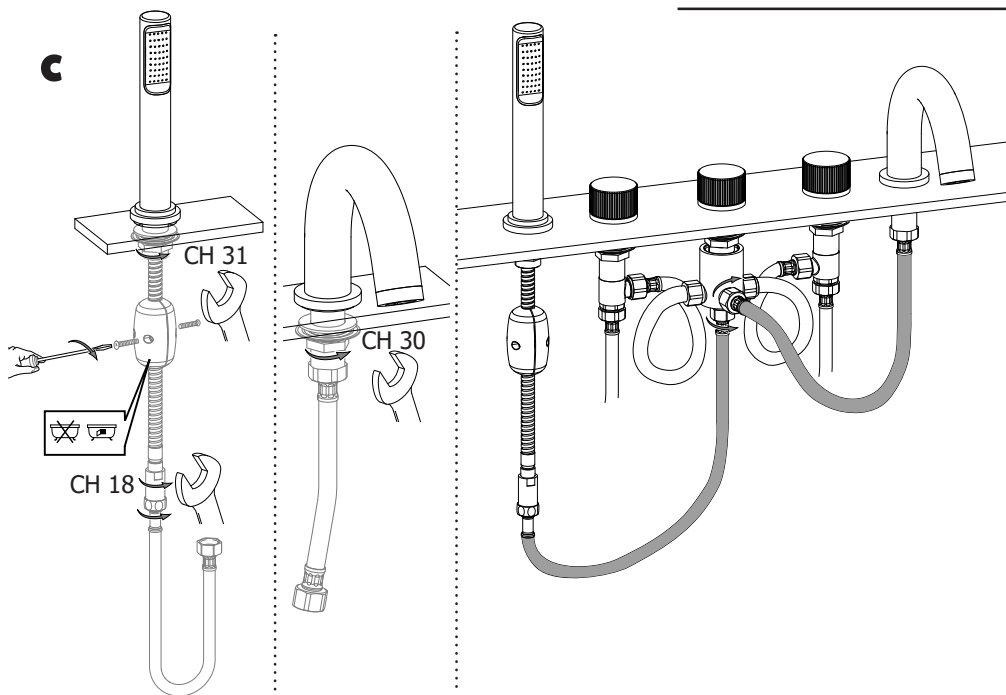 

D


Funzionamento deviatore
Diverter working

  STOP

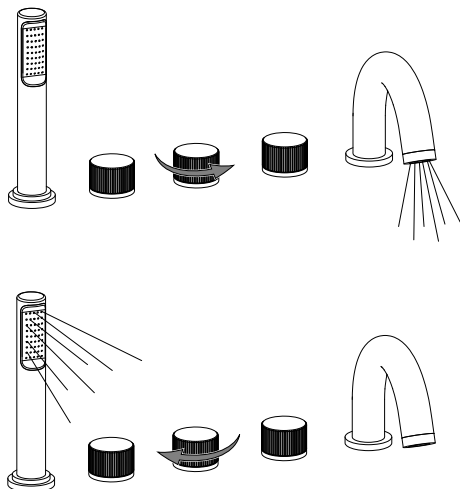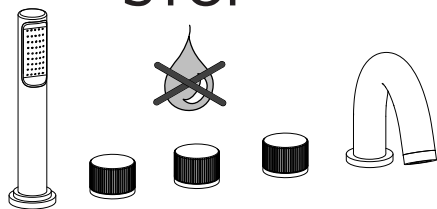

M

 Manutenzione
Service

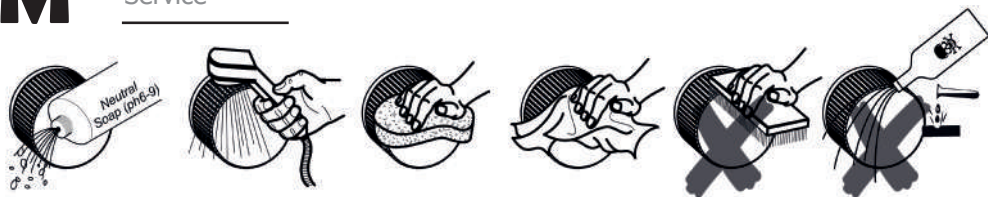





S
a

Sostituzione Vitone Ceramico How to replace Ceramic Disc Valve

003 004 008



b

    052
053
119
044

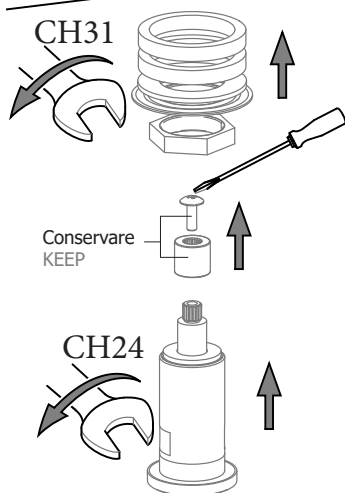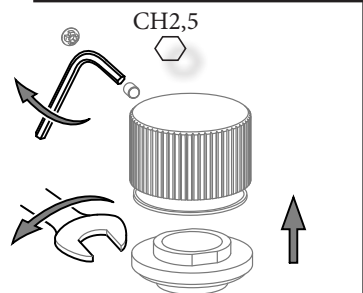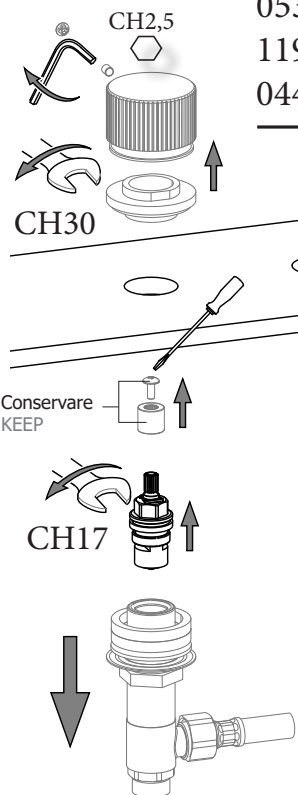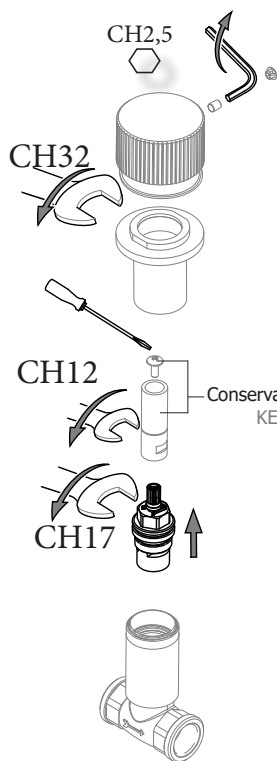


044

  003
008

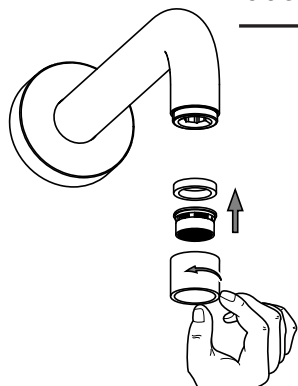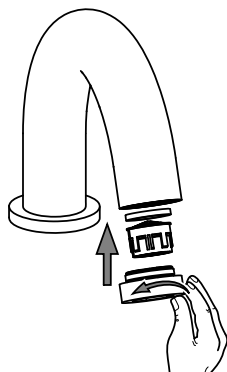

c

 Sostituzione Aeratore How to replace Aerator

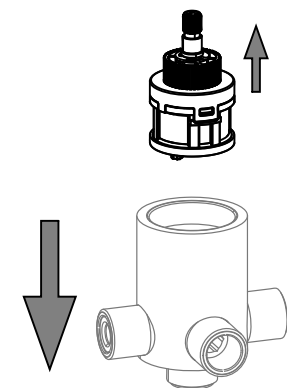

d

Sostituzione Deviatore How to replace Diverter